


EXERFLY

Ultimate Motorized User Manual


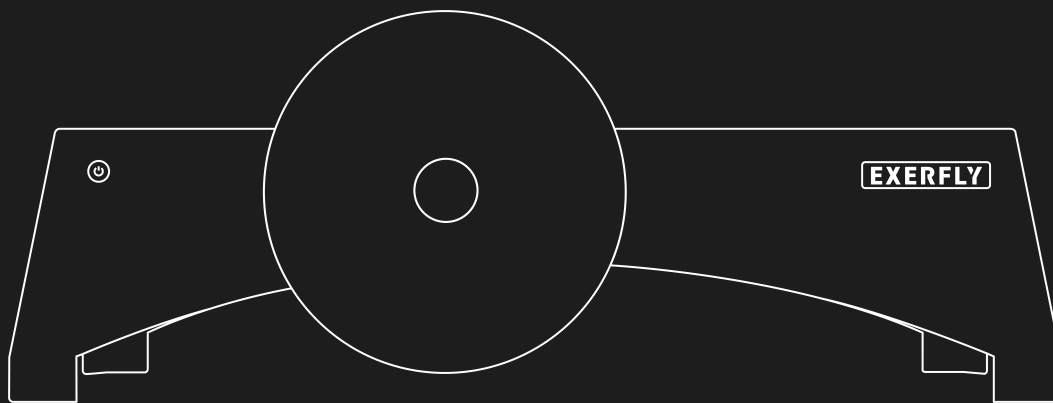


Contents

Specifications	4
Safety Guidelines	5
Overview of Parts	9
Accessories	10
Wheels	10
Ultimate Extension	10
Foot Block	11
Device Holder	11
Rope Guide	12
Bench	12
T-Bar	13
Rope Clamp	14
Flywheels	15
How to Add Flywheels	15
Connect to the Exerfly App	16
Calibrate	16
Display Menu Options	17
Motorized Technology	18
Getting Started	19
Maintenance	20
Warranty	21
Statement of Compliance	22

Specifications

Dimensions	46" x 26" x 12" (1,168.5 mm x 660.5 mm x 304 mm)
Weight	76 lbs (34.5 kg)

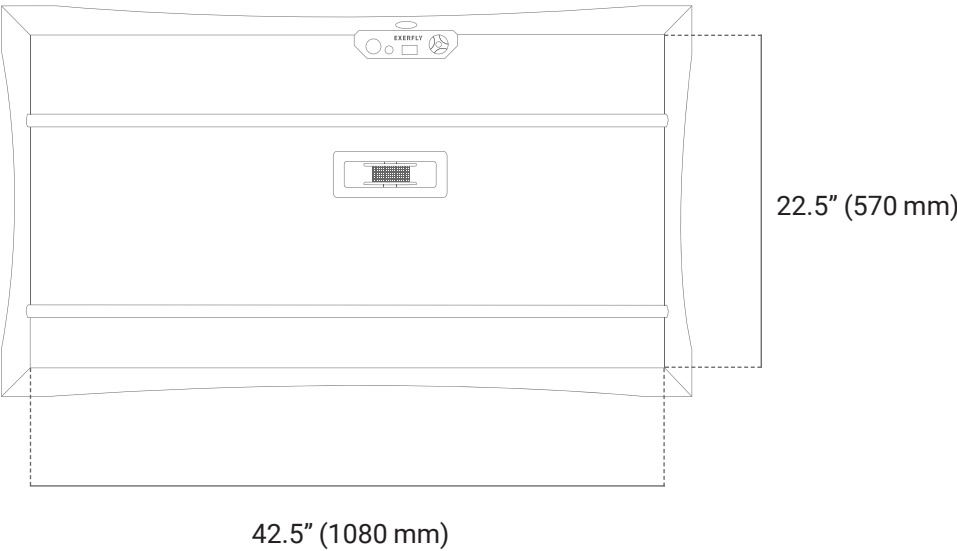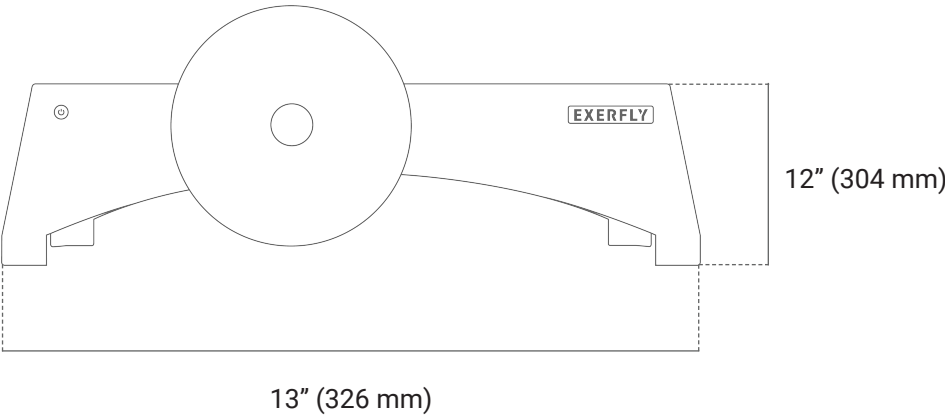

Safety Guidelines

SERIOUS INJURY COULD OCCUR IF THE BELOW PRECAUTIONS ARE NOT OBSERVED.

- Read and understand all warning labels and the user manual before use.
- Keep clear of moving parts. Contact may cause serious injury.
- Inspect the machine before each use. Do not use if damaged or inoperable.
- Do not modify the machine. Use only as intended.
- Inspect all parts, including the rope, for wear or damage. Replace if necessary.
- Keep children away from the machine. Minors must be supervised.
- Exercise in a clear, safe area.
- Start slowly with warm-up reps to gain confidence in the movement of the flywheel. Always start with an appropriate inertial load for the user's ability.
- If you feel pain or dizziness during exercise, stop immediately. Likewise, be mindful when fatigue hits as this can affect balance and cause uncontrolled body movements. If you have problems with balance make sure someone can support you, or hold on to another fixed object.
- Don't let the rope clamp or any handles hit the equipment, make sure you absorb the load before it hits the equipment.
- To stop an exercise, pause at the endpoint of the movement—for example, the bottom of a squat when the rope clamp is closest to the equipment.

如果不遵守以下预防措施, 可能导致严重伤害。

- 使用前请阅读并理解所有警告标签和用户手册。可通过二维码获取手册。
- 远离运动部件。接触可能导致严重伤害。
- 每次使用前检查机器。如有损坏或无法操作, 请勿使用。
- 请勿修改机器。仅按预期用途使用。
- 检查所有部件, 包括绳索, 是否有磨损或损坏。如有必要, 请更换。
- 请勿让儿童接近机器。未成年人必须在监督下使用。
- 在清晰、安全的区域进行锻炼。

不遵守这些预防措施可能导致严重伤害。

SCHWERE VERLETZUNGEN KÖNNEN AUFTRETEN, WENN DIE UNTEN AUFGEFÜHRTEN VORSICHTSMASSNAHMEN NICHT BEACHTET WERDEN.

- Lesen und verstehen Sie vor der Verwendung alle Warnhinweise und das Benutzerhandbuch. Zugriff auf das Handbuch über QR-Code.
- Halten Sie sich von beweglichen Teilen fern. Kontakt kann zu schweren Verletzungen führen.

- Überprüfen Sie die Maschine vor jedem Gebrauch. Bei Beschädigung oder Funktionsunfähigkeit nicht verwenden.
- Verändern Sie die Maschine nicht. Nur bestimmungsgemäß verwenden.
- Überprüfen Sie alle Teile, einschließlich des Seils, auf Abnutzung oder Schäden. Bei Bedarf ersetzen.
- Halten Sie Kinder von der Maschine fern. Minderjährige müssen beaufsichtigt werden.
- Trainieren Sie in einem klaren, sicheren Bereich.

Die Nichtbeachtung dieser Vorsichtsmaßnahmen kann zu schweren Verletzungen führen.

DES BLESSURES GRAVES PEUVENT SURVENIR SI LES PRÉCAUTIONS CI-DESSOUS NE SONT PAS RESPECTÉES.

- Lisez et comprenez toutes les étiquettes d'avertissement et le manuel d'utilisation avant utilisation. Accédez au manuel via le code QR.
- Éloignez-vous des pièces mobiles. Le contact peut causer des blessures graves.
- Inspectez la machine avant chaque utilisation. Ne pas utiliser si elle est endommagée ou inutilisable.
- Ne modifiez pas la machine. Utilisez uniquement comme prévu.
- Inspectez toutes les pièces, y compris la corde, pour détecter l'usure ou les dommages. Remplacez si nécessaire.
- Gardez les enfants éloignés de la machine. Les mineurs doivent être supervisés.
- Exercez-vous dans une zone claire et sûre.

Le non-respect de ces précautions peut entraîner des blessures graves.

PODRÍA OCURRIR UNA LESIÓN GRAVE SI NO SE OBSERVAN LAS SIGUIENTES PRECAUCIONES.

- Lea y comprenda todas las etiquetas de advertencia y el manual del usuario antes de usar. Acceda al manual mediante el código QR.
- Manténgase alejado de las partes móviles. El contacto puede causar lesiones graves.
- Inspeccione la máquina antes de cada uso. No la use si está dañada o inoperable.
- No modifique la máquina. Úsela solo según lo previsto.
- Inspeccione todas las piezas, incluida la cuerda, en busca de desgaste o daños. Reemplace si es necesario.
- Mantenga a los niños alejados de la máquina. Los menores deben ser supervisados.
- Haga ejercicio en un área clara y segura.

El incumplimiento de estas precauciones puede resultar en lesiones graves.

Motorized Technology

SERIOUS INJURY COULD OCCUR IF THE BELOW PRECAUTIONS ARE NOT OBSERVED.

- Using the Motorized Technology amplifies the energy of the flywheel in the eccentric phase.
- The Motorized feature may not be suitable for individuals with certain health and physical conditions that inhibit one's ability to move or exercise.
- To reduce risk, ensure you:
 - Warm up properly.
 - Have experience training on Exerfly flywheels without the Motorized Technology.
 - Start with a low Motor Boost (1–5%).
 - Use larger flywheels (0.1 kg·m²) initially — they spin slower and are easier to control.
 - Note: Smaller flywheels spin faster and are better suited for advanced users.
 - Before using the Motorized Technology, read the instruction manual or consult an Exerfly representative.

电动技术

如果未遵循以下预防措施, 可能会发生严重伤害。

- 使用电动技术会在偏心阶段放大飞轮的能量。
- 电动功能可能不适合某些健康和身体状况不允许运动或锻炼的个人。
- 为了降低风险, 请确保您:
 - 适当热身。
 - 在不使用电动技术的Exerfly飞轮上有训练经验。
 - 从低电动增益(1–5%)开始。
 - 初始使用较大的飞轮(0.1 kg·m²)——它们转速较慢, 更容易控制。
 - 注意: 较小的飞轮转速较快, 更适合高级用户。
 - 在使用电动技术之前, 阅读说明书或咨询Exerfly代表。

Motorisierte Technologie

ERNSTE VERLETZUNGEN KÖNNEN AUFTRETEN, WENN DIE FOLGENDEN VORSICHTSMASSNAHMEN NICHT BEACHTET WERDEN.

- Die Verwendung der motorisierten Technologie verstärkt die Energie des Schwungrads in der exzentrischen Phase.
- Die motorisierte Funktion ist möglicherweise nicht für Personen mit bestimmten gesundheitlichen und physischen Einschränkungen geeignet, die ihre Fähigkeit zur Bewegung oder zum Training beeinträchtigen.
- Um das Risiko zu verringern, stellen Sie sicher, dass Sie:
 - Sich richtig aufwärmen.
 - Erfahrung mit dem Training auf Exerfly-Schwungrädern ohne die motorisierte Technologie haben.

- Mit einer niedrigen Motorenverstärkung (1–5%) beginnen.
- Anfangs größere Schwungräder (0,1 kg·m²) verwenden — sie drehen sich langsamer und sind leichter zu kontrollieren.
- Hinweis: Kleinere Schwungräder drehen sich schneller und sind besser für fortgeschrittene Benutzer geeignet.
- Vor der Verwendung der motorisierten Technologie die Bedienungsanleitung lesen oder einen Exerfly-Vertreter konsultieren.

Technologie motorisée

DES BLESSURES GRAVES PEUVENT SURVENIR SI LES PRÉCAUTIONS CI-DESSOUS NE SONT PAS RESPECTÉES.

- L'utilisation de la technologie motorisée amplifie l'énergie du volant d'inertie dans la phase excentrique.
- La fonction motorisée peut ne pas être adaptée aux personnes ayant certaines conditions de santé et physiques qui limitent leur capacité à se déplacer ou à s'exercer.
- Pour réduire les risques, assurez-vous de :
 - Vous échauffer correctement.
 - Avoir de l'expérience avec l'entraînement sur les volants d'inertie Exerfly sans la technologie motorisée.
 - Commencer avec un faible niveau de renforcement moteur (1–5%).
 - Utiliser des volants d'inertie plus grands (0,1 kg·m²) au début — ils tournent plus lentement et sont plus faciles à contrôler.
 - Remarque : les volants d'inertie plus petits tournent plus vite et conviennent mieux aux utilisateurs avancés.
 - Avant d'utiliser la technologie motorisée, lisez le manuel d'instructions ou consultez un représentant Exerfly.

Tecnología Motorizada


SE PUEDEN PRODUCIR LESIONES GRAVES SI NO SE CUMPLEN LAS PRECAUCIONES A CONTINUACIÓN.

- Usar la tecnología motorizada amplifica la energía del volante en la fase excéntrica.
- La función motorizada puede no ser adecuada para personas con ciertas condiciones de salud y físicas que dificultan su capacidad para moverse o hacer ejercicio.
- Para reducir el riesgo, asegúrese de:
 - Calentar adecuadamente.
 - Tener experiencia entrenando con los volantes Exerfly sin la tecnología motorizada.
 - Comenzar con un aumento de motor bajo (1–5%).
 - Usar volantes más grandes (0,1 kg·m²) al principio — giran más lentamente y son más fáciles de controlar.
 - Nota: Los volantes más pequeños giran más rápido y son más adecuados para usuarios avanzados.
 - Antes de usar la tecnología motorizada, lea el manual de instrucciones o consulte a un representante de Exerfly.

Overview of Parts

Ultimate	
Figure 1	
1	On/Off Button
2	Flywheel
3	End Cap
4	Wheel Attachment Points
5	Rope Shaft
6	Tracks
7	Disable Motor Button
8	Status Light


Figure 1

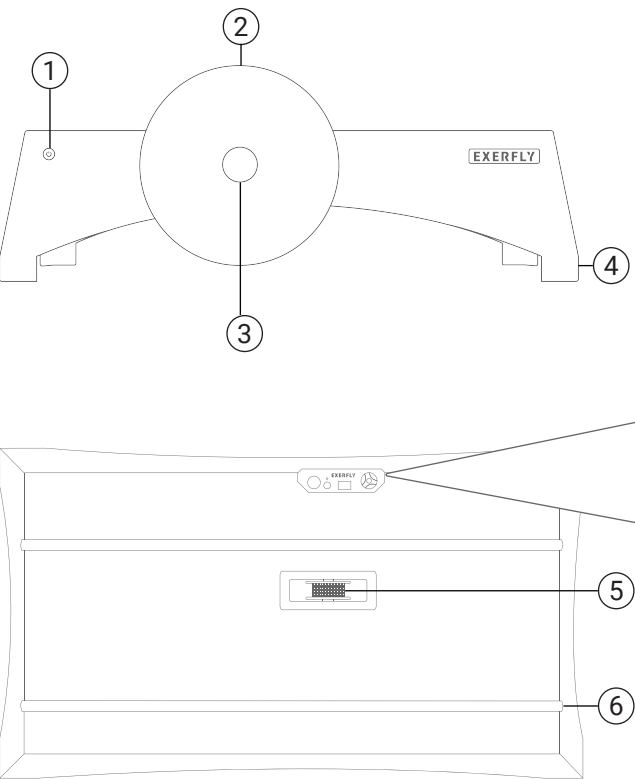

9	Reset Button
10	Display Screen
11	Scroll Button

Rope Clamp	
Figure 2	
1	Pull to Open Tab
2	Accessories Latch
3	Rope Clamp

Figure 2

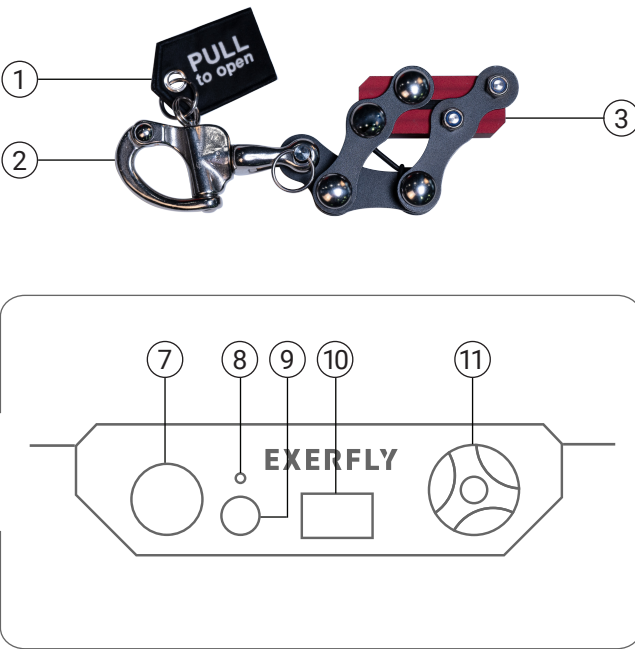

Accessories

Wheels

	2 x Caster Wheels		8 x M6x12 Pan Head Screws
	Phillips Screwdriver		

Step 1

Align the Caster Wheel to the four holes on the foot of the Ultimate. Tighten 4 x Pan Head Screws to secure.



Step 2

Repeat step one on the adjacent foot.



Ultimate Extension

	Ultimate Extension		4 x M6x12 Wing Screws
---	--------------------	---	-----------------------

Step 1

Align the four holes on the Extension to the four holes on the side of the Ultimate.



Step 2

Tighten the 4 x Wing Screws into the aligned holes to secure.



Accessories


Foot Block

	Foot Block
---	------------

- Step 1**

Align the heads of the two Mounting Plates underneath the Foot Block to the tracks on the Ultimate. Slide on.
- Step 2**

Adjust the angle as needed and tighten the Star Nuts to secure.

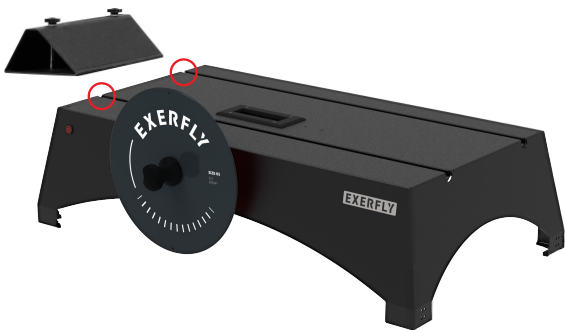

Device Holder

	Device Holder		Phone or Tablet Mount
---	---------------	---	-----------------------

- Step 1**

Screw the end of the Device Holder into the hole located above the On/Off Button.
- Step 2**

Screw either the Phone or Tablet mount to the top of the Device Holder.



Accessories

Rope Guide

	Rope Guide		2 x M6x12 Wing Screws
---	------------	---	-----------------------


Step 1
Align the Rope Guide to the two holes adjacent to the rope shaft. Secure using the 2 x Wing Screws.




Bench

	Bench
---	-------

Step 1
Align the heads of the two Mounting Plates underneath the Bench to the tracks on the Ultimate. Slide on.

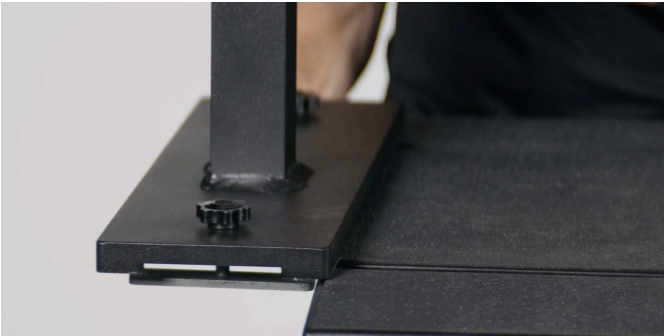

Step 2
Tighten the Star Nuts to secure in place.

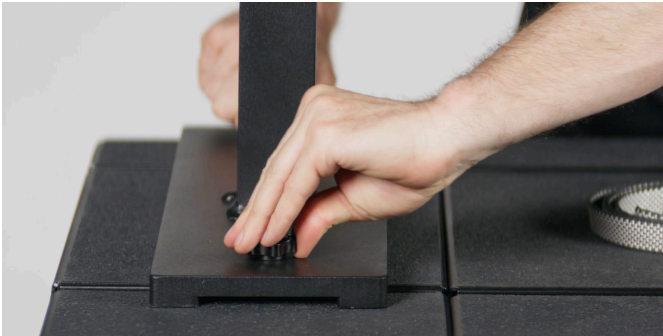


Accessories

T-Bar

	T-Bar Handle		T-Bar Base
	2 x M8x40 Button Head Hex Screw		2 x M8 Flat Washer
	2 x M8 Dome Nuts		2 x Mounting Plates
	M5 Allen Key		13 mm Wrench

Step 1

Slide the T-Bar Handle onto the base, aligning the holes together. Thread the 2 x Button Head Hex Screws through the aligned holes.

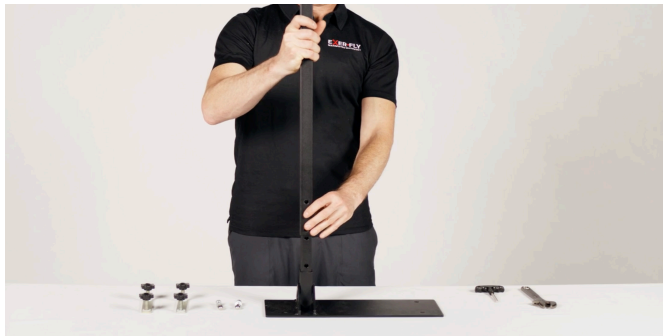


Step 2

Place a Flat Washer and Dome Nut on of each the screws and using the Allen Key and Wrench, tighten to secure.




Step 3

Thread the 2 x Mounting Plates in from underneath the base, loosley screw on the Star Nuts.

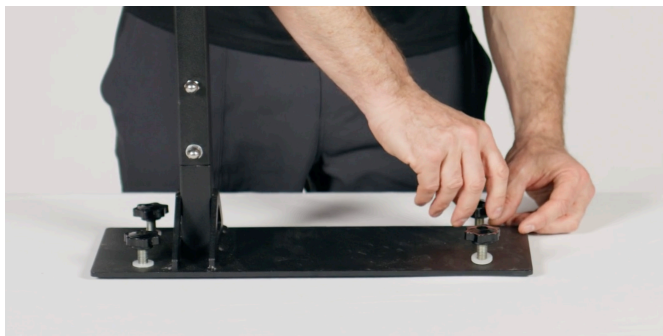

Step 4

Align the heads of the Mounting Plates to the tracks in the Ultimate and slide the T-Bar into place. Tighten the Star Nuts to secure.

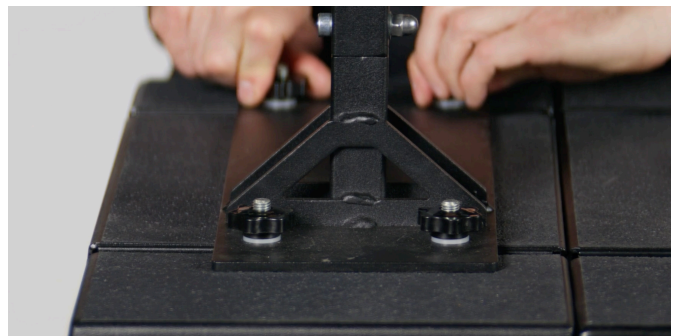

Rope Clamp

The Rope Clamp is designed to ensure there is no slippage on the rope between the user and the flywheel. Secure any accessory to the Rope Clamp using the accessories latch. Ensure the latch is locked in the closed position before performing an exercise.

Video: <https://vimeo.com/1026316700?share=copy>



Step 1

Holding the top and bottom of the Rope Clamp, push the ends together to open the clamp.



Step 2

Thread the end of the rope through the open Rope Clamp from the opposite side to the attachment latch.



Step 3

Keep the Rope Clamp open as you slide it up or down the rope. Release to lock in place. Position the Rope Clamp at the point where your movement switches from concentric to eccentric.



Flywheels

The Ultimate holds a maximum load of 8 large flywheels (0.8 kgm²). For first-time users, we recommend starting with moderate movement speeds with moderate to heavy inertial loads to get comfortable with the equipment. For lower-body exercises, start with one large flywheel (0.1 kgm²). For upper-body movements, begin with one medium flywheel (0.05 kgm²)



Video: <https://vimeo.com/1025979029?share=copy>

Size	Inertial Load	Recommended Use
Large	0.1 kgm ²	The large flywheel is best for low velocity, strength based lower body exercises.
Medium	0.05 kgm ²	The medium flywheel provides a good balance of force and velocity, best for power development, and upper body exercises.
Small	0.025 kgm ²	Useful for light rehab movements, or high velocity movements.
X Small	0.0125 kgm ²	Useful for light rehab movements, or high velocity movements.
XX Small	0.00625 kgm ²	Useful for light rehab movements, or high velocity movements.

How to Add Flywheels

Step 1

Align the flywheel to the shaft and push the flywheel to the end of the shaft.



Step 2

Screw the End Cap onto the end of the shaft. Tighten to secure.



Connect to the Exerfly App

Step 1

Download the Exerfly app on IOS or Android, or scan the QR code to use the desktop version.

<https://app.exerfly.com/>



Step 2

Plug the supplied power cord into a wall socket and in to the bottom of the Ultimate. Turn the switch on. Press the On button on the front of the Ultimate. The power must be connected to enable Bluetooth pairing.



Step 3

In the app, select the Bluetooth button and pair your Exerfly unit. You will hear three beeps once connected.



Not connected



Connected

Step 4

To disconnect your Bluetooth connection and allow others to connect, press the Reset Button.

Calibrate

Calibration allows the device to precisely detect the point where concentric switches to eccentric. It is important to calibrate the unit each time it is turned on for the accuracy of live data tracking and the Motorized Technology.


Step 1

Pull the rope out completely and hold it vertical. Continue to hold the rope in this position for step two.




Step 2

On the Display Screen, select Calibrate > Start calibrate. Another option is to select Calibrate on the Exerfly app. The Status Light will flash and you will hear a beep, calibration is complete.

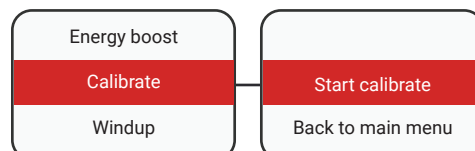

Display Menu Options

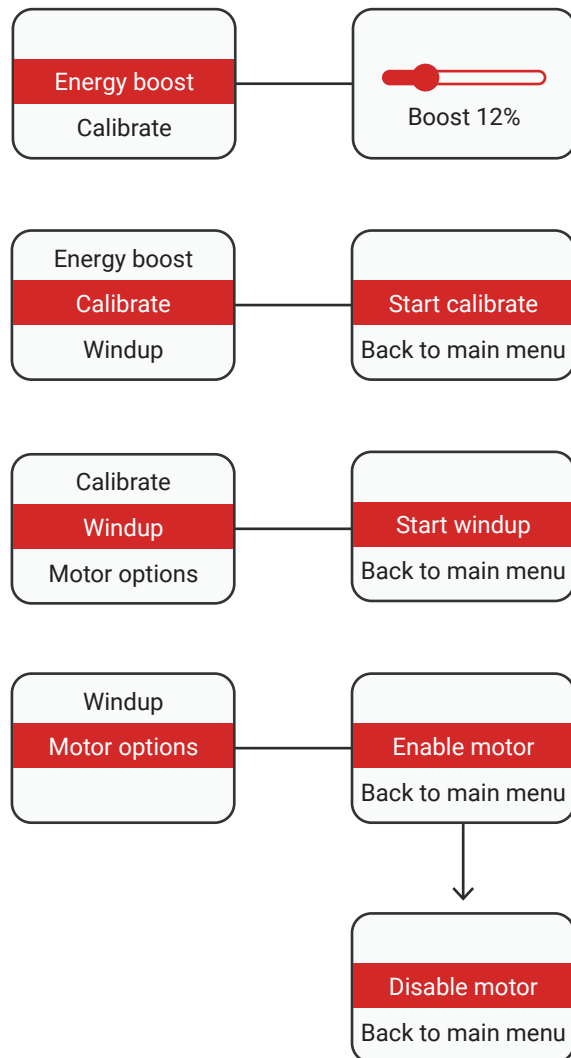

Energy Boost

Adjust the percentage of Energy Boost to apply in the eccentric phase. After five minutes of inactivity, the Energy Boost will set to 0% boost for safety.

Calibrate

Calibrate the Ultimate each time it is turned on. See page 16 for how to calibrate.

Wind-up

This is an optional setting that enables an automatic wind-up of the rope on the first rep. A progressive beeping countdown signals the windup function.

Motor Options

- Select the 'Enable motor' option to allow the Motorized Technology to engage.
- Choose the 'Disable motor' option to prevent the Motorized Technology from operating.

Motorized Technology

WARNING

Users must read the safety guidelines on page 05 - 08 before using the Motorized Technology.

How the Motorized Technology Works

Non-motorized flywheel training creates roughly a 1:1 ratio (concentric:eccentric) of resistive load. Meaning the energy that the athlete applies in the concentric (upward) phase is also applied equally in the eccentric (downward) phase. The Motorized Technology gives you the ability to boost the proceeding eccentric repetition up to 80% greater than the concentric repetition.

Motorized Boost Ranges

By default, the Motorized Boost percentage is 1-30% boost as a safety precaution. To access the complete range of 1-80% Motorized Boost, please contact support for assistance.

Disable Motor Button

Pressing this button prevents the motor from engaging on the next rep. However, it does not stop the flywheel's momentum. To fully halt movement, ensure the flywheel comes to a complete stop.

How to Use the Motorized Technology

1. Connect the power – See page 16 for details.
2. Ensure the Disable Motor Button is disengaged – If engaged, the button will be lit green. Twist the button to release it.
3. Enable the motor – On the display screen, select Motor Options > Enable Motor. A distinct activation sound will confirm the motor is engaged. If you hear three beeps, review these steps to ensure proper setup.
4. Calibrate the Ultimate – See page 16.
5. Set the Energy Boost % – On the display screen, select Energy Boost and adjust the percentage. You can also configure this setting in the app.
6. (Optional) Enable Windup Mode – Select Windup > Start Windup on the display screen to automatically wind up the rope on the first rep.

Getting Started

Important Reminders

- Flywheel training is user-defined, meaning the more force you apply, the more the resistance it provides in return. Start slow while you become familiar with this unique resistance.
- Be prepared to control the eccentric phase of the movement, and try to prevent the rope clamp from colliding with the unit.
- To stop the motion of the flywheel, stop the exercise at the end of the eccentric phase, or nearest the equipment.



Video: <https://vimeo.com/1026291203?share=copy>

Step 1

Adjust the Rope Clamp to the “top” of your movement—the point where your exercise switches from the concentric to the eccentric phase. See page 14 for how to adjust the Rope Clamp.



Step 2

Spin the Flywheel to wind the rope back onto the shaft. Stop before the Rope Clamp reaches the equipment.



Step 3

Begin with a number of warm-up repetitions. Increase your speed as you become more confident with the movement.



Step 4

To stop the motion of the Flywheel, stop the exercise at the end of the eccentric phase, or nearest the equipment.



Maintenance

Replacing the Rope

The rope should be replaced when signs of wear appear. Spare Rope is included in your equipment package.

Video: <https://vimeo.com/1066751604?share=copy>



	1 x Spare Rope		1 x Dowel Pin
	1 x Flat Head Screwdriver		

Step 1

Insert a small screwdriver through the narrow slot in the shaft and push the rope through to the other side to dislodge the Dowel Pin.



Step 2

Insert the new rope into the narrow slot in the shaft. Pull the rope through the other side and fold the end of the rope over the Dowel Pin.



Step 3

Insert the folded rope with the Dowel Pin through the large slot on the shaft and pull the rope firmly to secure.



Warranty

Exerfly offers a 2-year warranty on all equipment and a lifetime warranty on all steel frames and welded parts from the date of receipt. If you experience an issue, submit a claim to support@exerfly.com for assessment.

Exclusions

This warranty does not cover:

- Damage caused by improper use, accidents, or continued use after a defect is noticed.
- Repairs or servicing not performed according to Exerfly's instructions.
- Use of non-OEM parts or unauthorized repairs.
- Opening the unit or modifying internal components without Exerfly's authorization.

Shipping

All shipments are insured until delivery. Orders ship from the United States. International shipments are sent DDP (Delivery Duty Paid). Customers within the European Union must provide an EORI number.

Limitation of Liability

To the fullest extent permitted by law, Exerfly is not liable for any direct, indirect, incidental, or consequential damages related to the use or performance of the product, including personal injury, property damage, or financial loss.

Statement of Compliance

Exerfly hereby confirms that the following products, manufactured by Exerfly, comply with the relevant EU Directives:

2014/53/EU on Radio Equipment

2014/30/EU on Electromagnetic Compatibility

2011/65/EU on Restriction of Hazardous Substances in Electrical and Electronic Equipment (RoHS)

2014/35/EU on Low Voltage

2006/42/EC on Machinery

Description of Goods:

- Exerfly Ultimate
- Exerfly Rack-Fly
- 3 x 3 Base Model
- 3 x 3 7 Foot
- 3 x 3 9 Foot
- All Exerfly Accessories

Manufacturer Details:

Exerfly
2020 Prairie Lane
Eau Claire, Wisconsin 54703
USA



Online Download
support@exerfly.com